

Courtyard Optional Contemporary Hearth Kit

MODEL: MOD-ODCOUG36, MOD-ODCOUG42

Installation Instructions



Leave this manual with party responsible for use and operation.

CAUTION! Risk of Injury. Wear protective gloves and safety glasses during installation. Sheet metal edges are sharp.

WARNING! Risk of Injury! This kit must be installed by a qualified service technician.

Introduction/Before You Start

The optional contemporary hearth kit allows you to transform the look of the Courtyard to a contemporary fireplace with a crushed glass firebed. Read instructions completely before installing the optional modern hearth kit. This kit can be installed easily after installation of the appliance and can be an option to replace the traditional log kit at any time. Required glass media (4 bags) must be purchased separately and must be installed before operation of appliance with this contemporary hearth kit.

NOTE: During operation, it is common that some sooting will occur. It is recommended, not required, to install the grate and log set when operating the appliance with propane (LP) to minimize sooting. Clean soot from the appliance as frequently as necessary to eliminate buildup. Permanent discoloration of the screen could also occur.

KIT CONTENTS:

- (1) Left Burner Base Wing
- (1) Right Burner Base Wing
- (1) Right Wing Tube Cover
- (2) Burner Base Wing Support
- (2) Deflection Glass Retainer Brackets
- (1) Deflection Glass
- (8) #8 Pan Head Screws

Preparation

CAUTION! Risk of Burns! The fireplace should be turned off and cooled before contemporary kit is installed.

1. Inspect all contents from the modern hearth kit to ensure each item is free of damage.

CAUTION! Do not install damaged components.

2. Shut off gas supply and disconnect electrical power.
3. Remove grate, logs and lava rock, if previously installed.

Installation Instructions

1. Inside the fireplace, locate the four screws (two on each side of the burner cover) and remove as shown in Figure 1.

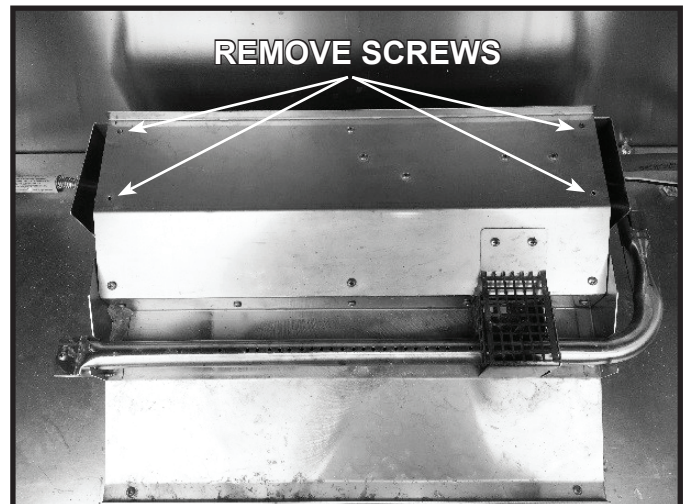


Figure 1. Remove Screws

CAUTION! When installing the modern kit, you must use the screen kit. DSCOUG-36 or DSCOUG-42 is required when unit is in operation.

2. Attach the burner base wing brackets to the left and right burner base wings with the supplied 4 screws (two on each side). See Figure 2.

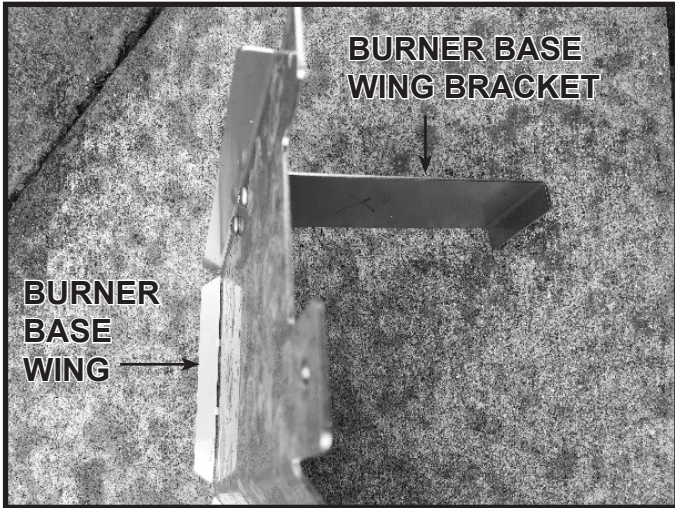


Figure 2. Attach Burner Base Wing Brackets

3. Install the left burner base wing by placing it into position at an angle making sure the end of the burner tube is above the surface of the wing. The wing has two tabs that rest on top of the burner cover and align with the two screws removed in step 2. See Figure 3.

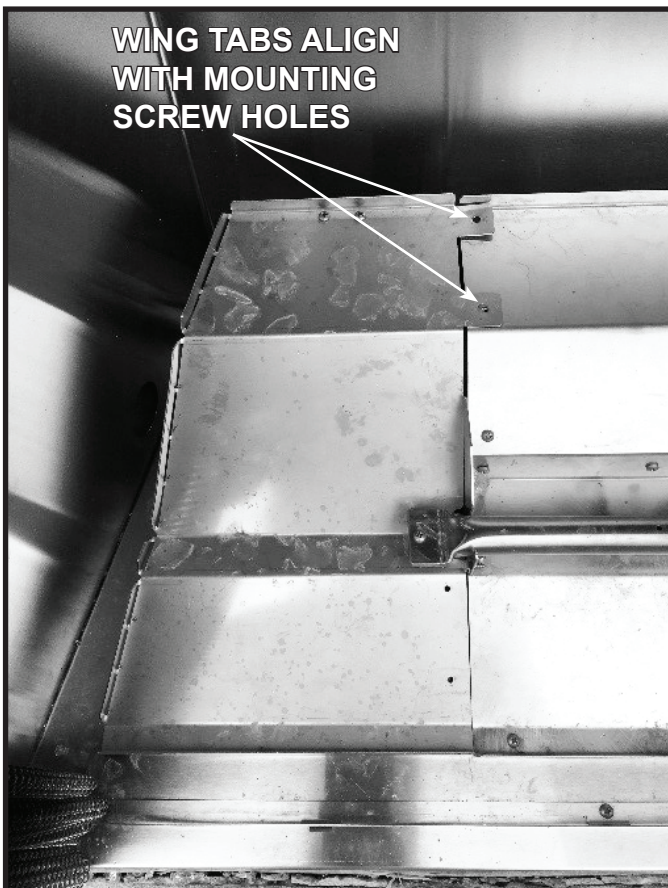


Figure 3. Location of Wing Tabs

4. Install the right burner base wing by placing it into position at an angle with the C-notch under and around the burner tube. The wing has two tabs that rest on top of the burner cover and align with the screws removed in Step 2. Place the right wing tube cover on the wing and secure with two (2) supplied screws. This will ensure media remains on top of wing and does not fall below to the firebox base. See Figure 4.

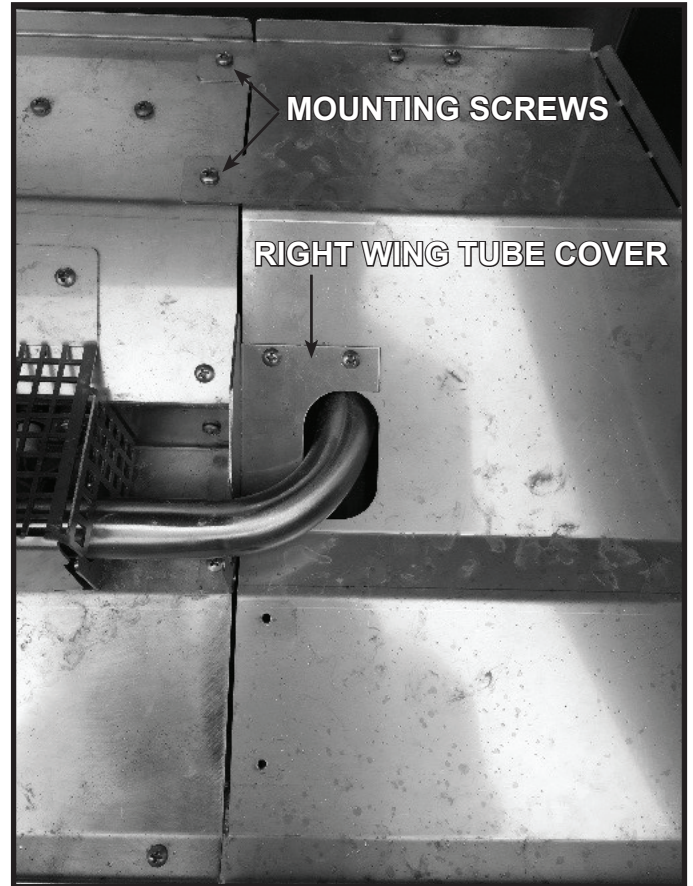


Figure 4. Install Right Burner Base Wing

5. Install the left and right deflection glass retainer brackets using the four screws provided. Each bracket requires two screws. See Figure 5.

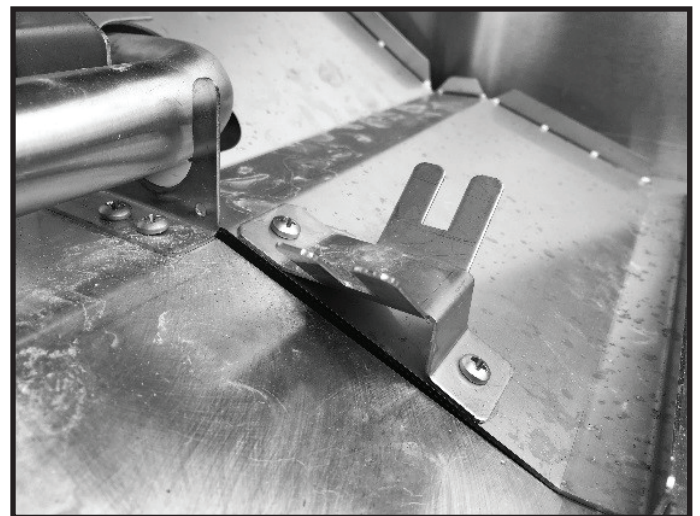


Figure 5. Install Deflection Glass Retainer Brackets

- Install the deflection glass by inserting the glass between the retainer bracket fingers and centering the glass to have equal distance from the edge of the burner to the edge of the glass. See Figure 6.

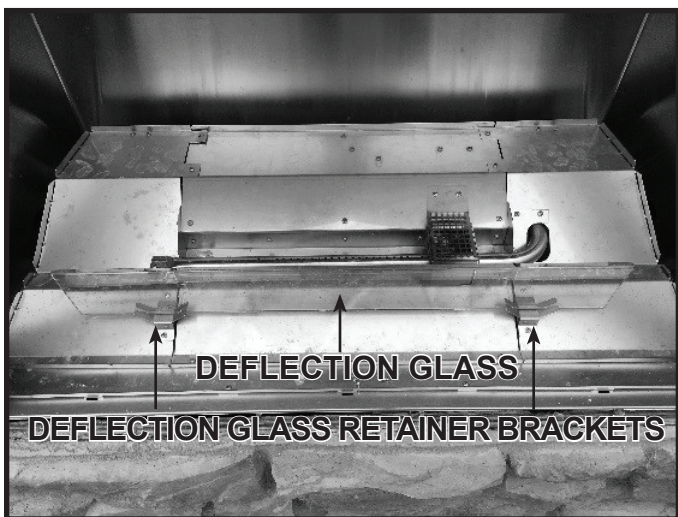


Figure 6. Install Deflection Glass

- Place four bags of glass media (not supplied) evenly over the entire burner base and burner tube as shown in Figure 7. Do not cover the top of the pilot shield. Failure to leave this area open will result in reduced function and delayed ignition.

WARNING! Choking Hazard! Keep media and stones out of reach of children.

⚠ WARNING	
	Delayed Ignition Risk
	<ul style="list-style-type: none"> Place media according to instructions.
	<ul style="list-style-type: none"> Do NOT place media in a position that they may fall into area in front of pilot.
	<ul style="list-style-type: none"> Do NOT use any media other than the media supplied with this fireplace.
	<ul style="list-style-type: none"> Do NOT exceed one layer of media on base pan.
Fireplace will not function properly. Delayed ignition may occur.	

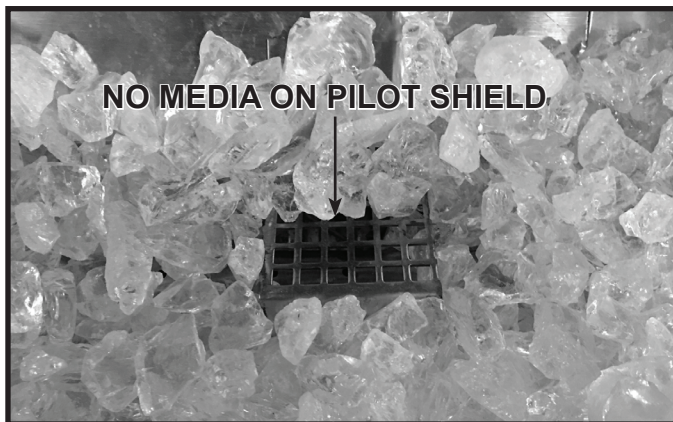


Figure 7. Install Media

Glass Media Options

DESCRIPTION	PART NUMBER
Ebony (Black)	MEDIA-EBONY-48
Cobalt (Blue)	MEDIA-COBALT-48
Scarlet (Red)	MEDIA-RED-48
Amber	MEDIA-AMBER-48
Crystal (Translucent White)	MEDIA-CLEAR-48

Outdoor Lifestyles, a brand of Hearth & Home Technologies
 7571 215th Street West, Lakeville, MN 55044
www.hearthnhome.com

Please contact your Outdoor Lifestyles dealer with any questions or concerns.
 For the location of your nearest Outdoor Lifestyles dealer, please visit www.hearthnhome.com.