


Installation Instructions


Models: Villa Gas Screen Doors DSVILLA36 DSVILLA42



These screen doors have been tested for use with the Villa Gas Outdoor Decorative Gas Appliance. Check with your local building code agency before you begin installation to ensure compliance with local codes, including the need for permits and follow-up inspections. If you encounter any problems regarding code approvals, or if you need clarification of any of the instructions contained here, contact your Hearth & Home Technologies dealer. For the dealer nearest you, please visit www.hearthnhome.com.

CAUTION! Risk of Cuts, Abrasions or Flying Debris. Wear protective gloves and safety glasses during installation. Sheet metal edges are sharp.

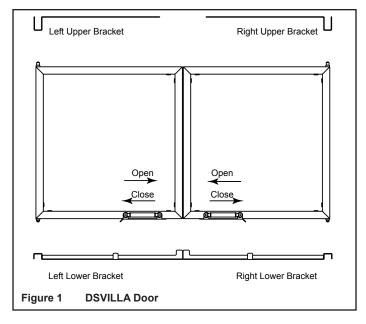

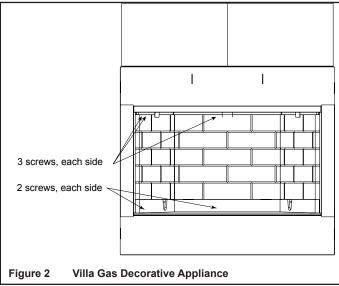

- 1. Remove pull screens and discard.
- 2. Use a Phillips screwdriver to remove three screws from the left side of the hood.



Figure 3 Remove 3 Screws

3. Install the left upper door bracket (marked with an "L") using the three screws. Do not tighten.



Figure 4 Install Upper Left Bracket

Repeat steps 2-3 on the right side. (Right upper door bracket marked with an "R".) 5. Remove two screws from the bottom left of the door opening of the Villa Gas and set aside.



Figure 5 Remove 2 Screws

6. Place the left lower bracket on the bottom of the left door and hold in place.

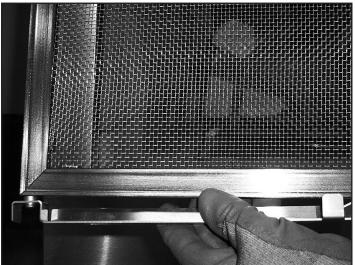


Figure 6 Position Lower Bracket

 Place the pin on the upper left corner of the door into the bracket installed in step 2.



Figure 7 Upper Left Pin on Door into Upper Bracket

 Push the lower bracket into place keeping the bracket tight against the column.



Figure 8 Push Lower Bracket into Place

- 7. Open door.
- 8. Place the two screws from step 4 through the slots (centered) in the lower bracket and into the holes in the Villa Gas, tighten.
- 9. Repeat steps 4-7 for the right side.

Note: Bottom brackets will meet in the middle.

10. Adjust the top of the doors by sliding the top brackets left or right. When doors are sitting in a satisfactory position, tighten the three upper screws on each side.

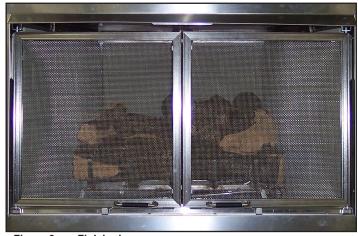


Figure 9 Finished

Note: Locking tabs on bottom brackets may be bent in or out with pliers to tighten door fit-up when latched. See Figure 9.